



Nemo Wide Dive Computer

• TABLE OF CONTENTS

1 INTRODUCTION	3		
1.1 GLOSSARY	3		
1.2 OPERATING MODES	4		
1.3 USER-REPLACEABLE BATTERY	4		
1.4 CONNECTING NEMO WIDE TO A PC OR MAC	4		
1.5 BUTTON OPERATION	4		
2 MENUS, SETTINGS AND FUNCTIONS	6		
2.1 MODE	6		
2.2 SET	7		
2.2.1 SET DIVE	7		
2.2.1.1 LGHT (BACKLIGHT)	7		
2.2.1.2 P FCT (P FACTOR)	7		
2.2.1.3 ALT (ALTITUDE)	8		
2.2.1.4 WATR (WATER)	8		
2.2.1.5 UN:TS (UNITS)	8		
2.2.1.6 FAST (FAST ASCENT)	8		
2.2.1.7 ALRM (ALARMS)	8		
2.2.1.8 ERASE (ERASE DESATURATION)	8		
2.2.2 SET TIME	8		
2.3 LOGBOOK	9		
2.4 DIVE PLANNER	9		
2.5 PC	9		
2.6 INFO	9		
3 DIVING WITH NEMO WIDE	9		
3.1 A FEW WORDS ABOUT NITROX	9		
3.2 ALARMS	10		
3.2.1 ASCENT RATE	10		
3.2.2 MOD/PPO ₂	10		
3.2.3 CNS = 100%	10		
		3.2.4 MISSED DECOMPRESSION STOP	11
		3.2.4.1 MISSED DECO STOP MODE	11
		3.2.5 LOW BATTERY	11
		3.3 DISPLAY INFORMATION	11
		3.4 AFTER THE DIVE	12
		3.5 DIVING WITH MORE THAN ONE GAS MIXTURE	12
		3.5.1 SETTING MORE THAN ONE GAS	12
		3.5.2 SWITCHING GAS	13
		3.5.3 SPECIAL SITUATIONS	13
		3.5.3.1 SWITCHING BACK TO A GAS MIXTURE WITH LOWER OXYGEN CONCENTRATION	13
		3.5.3.2 SUBMERGING BELOW THE MOD AFTER A GAS SWITCH	13
		3.6 BOTTOM TIMER MODE	13
		3.6.1 DIVE VIOLATION INDUCED BOTTOM TIMER MODE	14
		4 TAKING CARE OF NEMO WIDE	14
		4.1 TECHNICAL INFORMATION	14
		4.2 MAINTENANCE	14
		4.2.1 REPLACING THE BATTERY IN NEMO WIDE	14
		4.3 WARRANTY	14
		4.4 WARRANTY EXCLUSIONS	14
		4.5 HOW TO FIND THE PRODUCT SERIAL NUMBER	15
		5 DISPOSAL OF THE DEVICE	15

• 1 INTRODUCTION

1.1 GLOSSARY

	Symbolizes uncontrolled ascent violation.
	Symbolizes decompression stop violation.
ASC:	Total ascent time, the time it takes to perform the ascent from your current depth to the surface in a decompression dive, including all decompression stops and assuming an ascent rate of 10m/min or 33ft/min.
AVG:	Average depth, calculated from the beginning of the dive.
CNS:	Central Nervous System. CNS% is used to quantify toxic effects of oxygen.
DESAT:	Desaturation time. The time needed for the body to eliminate the nitrogen taken up during diving.
Gas switching:	The act of changing from one breathing gas to another.
Max depth:	Maximum depth attained during the dive.
MOD:	Maximum Operating Depth. This is the depth at which the partial pressure of oxygen (ppO ₂) reaches the maximum allowed level (ppO _{2,max}). Diving deeper than the MOD will expose the diver to unsafe ppO ₂ levels.
Multigas:	Refers to a dive in which more than one breathing gas is used (air and/or Nitrox).
Nitrox:	A breathing mix made of oxygen and nitrogen, with the oxygen concentration being 22% or higher.
NO FLY / 	Minimum amount of time the diver should wait before taking a plane.
No deco time:	This is the time that you can stay at the current depth and still make a direct ascent to the surface without having to perform mandatory decompression stops.
O₂:	Oxygen.
O₂%:	Oxygen concentration used by the computer in all calculations.
P Factor:	Personalization factors, which allow the user to select between the standard decompression algorithm (P0) and an increasingly more conservative one (P1, P2).
ppO₂:	Partial pressure of oxygen. This is the pressure of the oxygen in the breathing mix. It is a function of depth and oxygen concentration. A ppO ₂ higher than 1.6bar is considered dangerous.
ppO_{2,max}:	The maximum allowed value for ppO ₂ . Together with the oxygen concentration it defines the MOD.
Switch:	The depth at which the diver plans to switch to a higher oxygen concentration mix while using the multigas option.
SURF:	Surface interval.

1.2 OPERATING MODES

The functions of the Nemo Wide computer can be grouped into three categories, each corresponding to a specific mode of operation:

- surface mode: Nemo Wide is dry on the surface. You can change settings, review your logbook, use the dive planner, see remaining desaturation after a dive, download to PC and much more;
- dive mode: Nemo Wide monitors depth, time, temperature and performs all decompression calculations; dive mode itself can be broken down into 4 sub categories:
 - pre-dive (Nemo Wide is on the surface but actively monitoring ambient pressure, so that it can begin to calculate a dive the instant it is submerged below 1.2m/4ft);
 - dive
 - surfacing (Nemo Wide is on the surface at the end of a dive; dive time calculation is halted but if the diver submerges within three minutes the dive is resumed including the time spent on the surface);
 - post-dive (after the three minutes of surfacing mode, Nemo Wide closes the logbook and reverts to a display showing desaturation time, no-fly time and surface interval; this lasts until the desaturation and the no-fly time both have been reduced to zero).
- sleep mode: the computer is on the surface after 1 minute without operation (10 minutes from pre-dive mode). Though the computer appears to be turned off completely, it is still active. Nemo Wide computes tissue desaturation and checks the ambient pressure once every 20 seconds for uninterrupted monitoring of the environment.

1.3 USER-REPLACEABLE BATTERY

Nemo Wide uses a CR2450 user-replaceable battery. See section 4.2.1 for instructions on how to replace it. Good quality batteries should suffice for approx 300-500 dives, depending on the usage of the backlight and the temperature of the water. Diving in cold water, usage of the backlight and of the beeper increases battery consumption.


The display alerts you of the status of the battery. The three possible situations are described as follows:

- battery symbol not visible in the pre-dive and dive display: the remaining battery charge is adequate for diving;
- steady battery symbol on the display (dive and pre-dive): there is enough charge for a few more dives, but you should consider replacing the battery at the next opportunity;
- blinking battery symbol on the display: the battery is too weak for diving. If this happens during a dive, you must not perform any more dives before replacing the battery. If you see the blinking battery symbol on the surface, be aware that Nemo Wide will not function as a dive computer and will not turn on if submerged.

The level of the battery charge can also be found on the "INFO" page (see section 2.6).

1.4 CONNECTING NEMO WIDE TO A PC OR MAC

To connect Nemo Wide to a PC or Macintosh computer, use the optional clip and the USB cable and Dive Organizer to download your dives to a PC or Divers' Diary to download your dives to a Mac. Both software programs can be downloaded from www.mares.com.

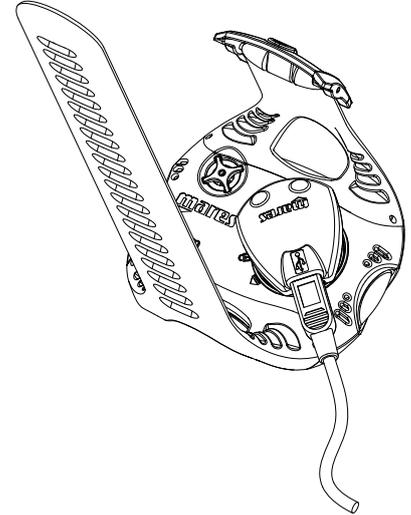

1.5 BUTTON OPERATION


Nemo Wide has 4 buttons, labelled **+**, **-**, **esc** and **enter**. On the surface, **enter** allows you to enter a menu and confirm a setting, **esc** exits a menu and goes up one level, **+** and **-** increase/decrease the value of a setting or move to the next item in a list.

During the dive, the **+** button modifies the top row (depth information) whereas the **-** button modifies the lower right corner of the display. Press and hold the **+** button to activate the backlight.

An overview of the button function both in surface mode and during a dive is presented here below.


SURFACE MODE

- press
- press and hold: BACKLIGHT
(always with exception when G2 = ON and O₂% on display)

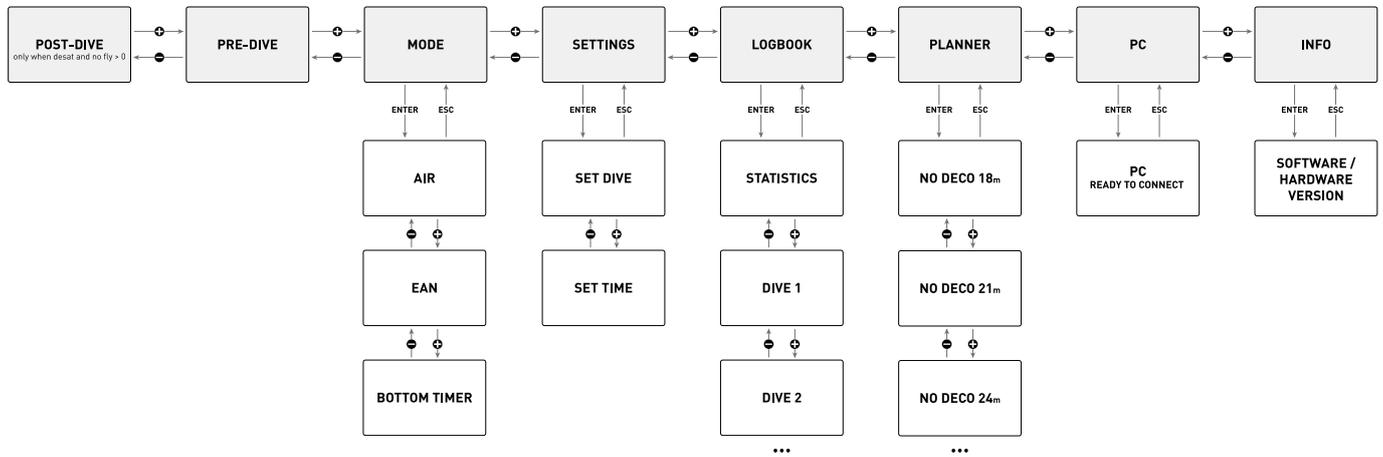

DIVE MODE

- press
- press and hold: BACKLIGHT
(always with exception when G2 = ON and O₂% on display)

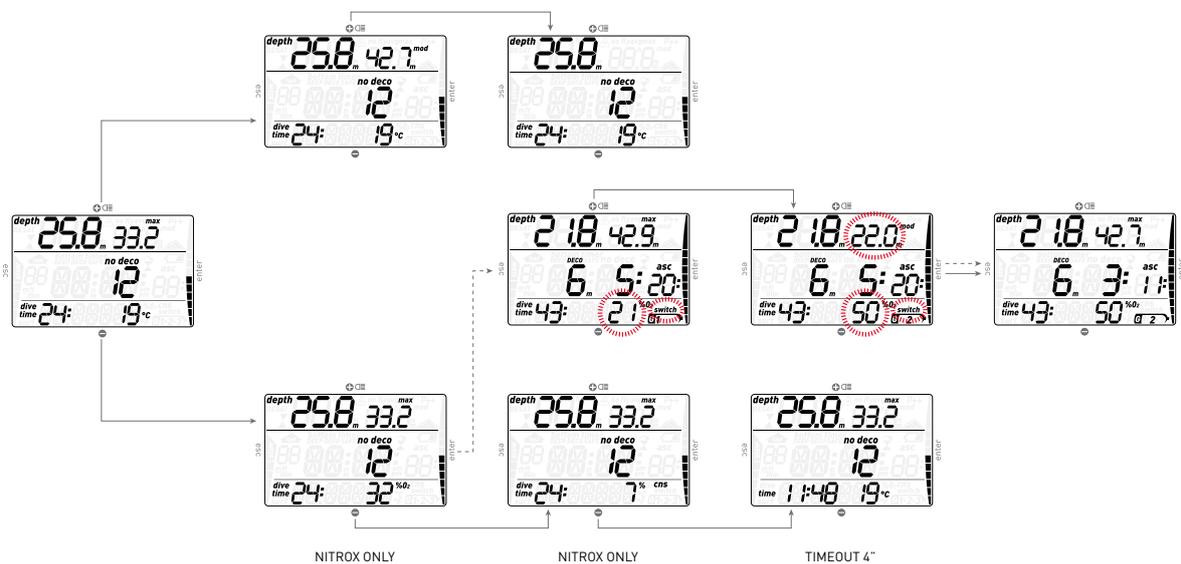


• 2 MENUS, SETTINGS AND FUNCTIONS

This chapter describes in detail all menus, setting and functions of the Nemo Wide dive computer.

Nemo Wide always switches on in pre-dive mode. From here, pressing the **+** or **-** button allows you to scroll through the following sequence of menus:

- **MODE**: allows you to set the computer to air, nitrox or bottom timer mode;
- **SET**: allows you to view and change all settings relative to the dive computer;
- **LOG**: allows you to access the detailed history of the dives performed;
- **PLAN**: allows you to view no deco times as a function of depth based on your current nitrogen load;
- **PC**: allows you to download dives to a PC or Mac
- **INFO**: allows you to view information about software and hardware of your Nemo Wide.

The **pre-dive** mode puts the computer in a ready-to-dive mode and ensures that Nemo Wide starts to monitor the dive as soon as a depth of 1.2m/4ft is reached. If you start the dive without putting Nemo Wide into **pre-dive** mode, it will start to monitor the dive automatically but with a delay of up to 20 seconds from immersion.

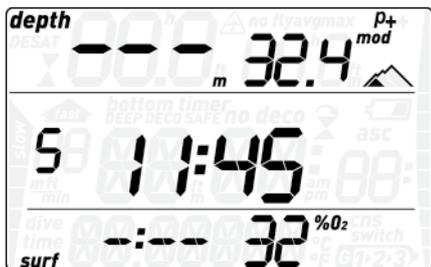

The pre-dive display shows p factor and altitude settings, time of day, surface interval since the last dive and temperature. If Nitrox is set, it will show the O₂ percentage and the corresponding MOD. A small S or F to the left of the middle row indicates the water type.

NOTE


- If you remain in pre-dive for longer than 10 minutes without pressing any button, Nemo Wide will switch off.
- It is recommended to put Nemo Wide into pre-dive before submerging. Not doing so can lead to a delay of up to 20s in Nemo Wide monitoring the dive.

2.1 MODE




Here you can define the type of gas you will be breathing during the dive (air or enriched air nitrox, including multigas). You can also set Nemo Wide to bottom timer, in which case Nemo Wide will show only time, depth and temperature: it will not carry out any decompression calculation and it will not show any warnings and alarms.

Press the **+** or **-** button to scroll through the three possible options (**AIR**, **EAN** or **bottom timer**), then press the **enter** button to select it.

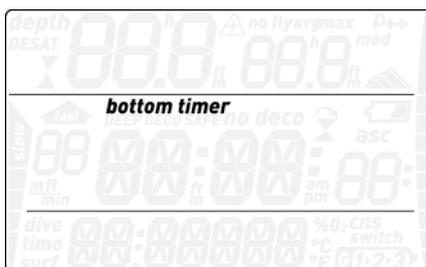

AIR is the equivalent of setting **EAN** to 21% and a ppO₂max of 1.4bar, but simplifies the display a bit by not showing the CNS [its value however is calculated in the background and if needed the 75% warning and the 100% alarm are triggered].

When selecting **EAN**, you are taken to a submenu in which you can define the percentage of oxygen in the mixture (%O₂) and the maximum value of oxygen partial pressure (ppO₂max) for up to three breathing mixes. The maximum possible value for the ppO₂max is 1.6bar. Most training agencies recommend not to exceed a value of 1.4bar.

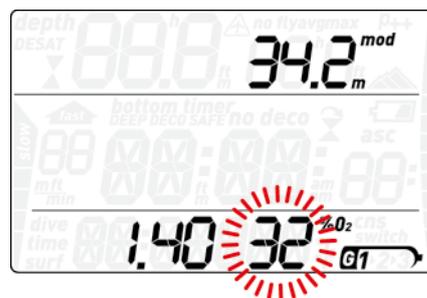

Once inside this menu, press the **+** or **-** button to change the O₂% and observe how this affects the maximum operating depth (MOD). Then press the **enter** button to move on to the ppO₂max and use the **+** or **-** button to change the value, again noticing how this affects the MOD. Press the **enter** button again to save the setting.



This leads you to the **G2 OFF** screen. Press **esc** to exit the menu or go to section 3.5 to read about diving with more than one gas.




⚠ WARNING



- Diving with Nitrox may only be attempted by experienced divers after proper training from an internationally recognized agency.
- Before every dive and after changing the tank, you must make sure that the set oxygen concentration in Nemo Wide corresponds to the oxygen concentration in the tank. Setting the wrong oxygen concentration can lead to serious injury or death.

See chapter 3.5 for more information about diving with more than one gas.

2.2 SET

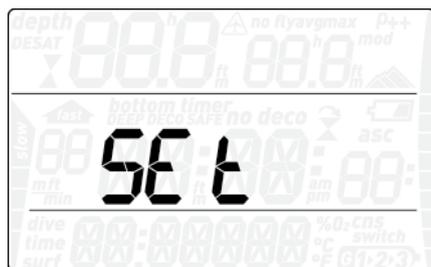

Nemo Wide's **SEt** menu allows you to change settings. Once inside this menu, press the **+** or **-** button to scroll between two submenus: **SEt dIVE**, where you can set parameters pertaining to the dive, and **SEt tIME**, where you can set parameters pertaining to time and date.

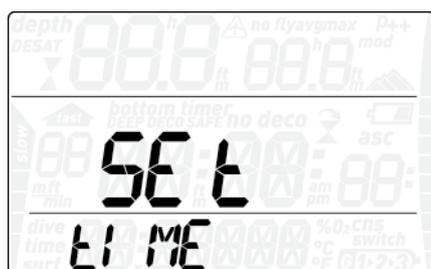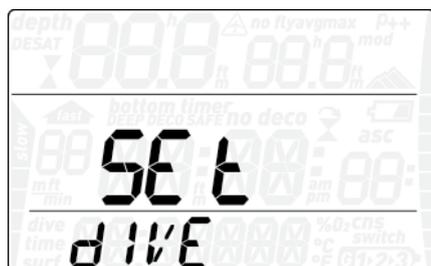


Press the **enter** button to enter a menu, press the **+** or **-** button to scroll up and down between available options or to increase or decrease the value of a setting. Then press the **enter** button to confirm the change in setting. Press the **esc** button to go up one level in the menu tree.

MENU	Description
SEt dIVE	Allows you to set the duration after which the backlight turns off automatically. You can set this between 1 and 10 seconds or you can set it to on . If you set it to on the backlight will remain on until you press and hold the + button again to turn it off.
- LGht	
- P Fct	Allows you to choose between the standard algorithm (P0) and an increasingly more conservative one (P1 , P2).
- ALt	Allows you to set the algorithm into altitude mode when diving in mountain lakes.
- WAtR	Allows you to choose between salt and fresh water.
- UN:tS	Allows you to choose between metric (m , °C) and imperial (ft , °F) units
- FAST	Allows you to turn off the dive violation due to uncontrolled ascent. This is for dive instructors only, who may find themselves in such a situation because of their teaching requirements.
- ALRM	Allows you to turn on or off all audible alarms of Nemo Wide.
- ErASE	Allows you to reset the nitrogen saturation to zero, thereby erasing the effects of a previous dive. This is only for people who plan to lend their computer to another diver who has not performed a dive within the last 24 hours.
SEt tIME	Allows you to set the time.

2.2.1 SEt dIVE

2.2.1.1 LGht (BACKLIGHT)

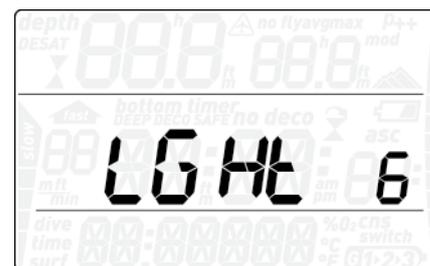


Nemo Wide has a backlight which can be activated in case of low ambient light. The backlight is activated by pressing and holding the **+** button. During a dive, the backlight will stay on for the duration defined in this menu. You can choose between 1 and 10 seconds, or you can set it to **on**. If you set it to **on**, the backlight will remain on until you press and hold the **+** button again.

NOTE

- The backlight consumes battery energy: the longer the backlight stays on, the less your battery will last.
- If the **low battery** warning is activated, the backlight will be disabled.

In surface mode, the backlight can be activated by pressing and holding the **+** button. The backlight will stay on for 6 seconds, unless you go into any menu, in which case it will stay on until you return to the pre-dive display or after one minute of no button operation (at which point Nemo Wide turns off).

2.2.1.2 P Fct (P FACTOR)

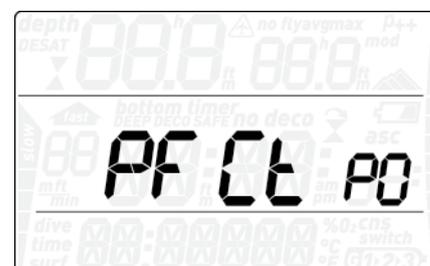

Nemo Wide allows you to set an additional personal safety factor for those circumstances in which you want to be especially cautious, such as after a long period of inactivity or when planning a strenuous dive. In this menu you can choose between the standard algorithm (**P0**), a more conservative version (**P2**) or an intermediate one (**P1**). On the pre-dive, post-dive, logbook and planner displays, P1 is displayed with **p+**, P2 with **p++** and P0 is indicated by the absence of symbols.

NOTE

The choice of **p factor** will be reflected in the dive planner.

2.2.1.3 ALt (ALTITUDE)



Atmospheric pressure is a function of altitude and of weather conditions. This is an important aspect to consider for diving, because the atmospheric pressure surrounding you has an influence on uptake and subsequent release of nitrogen. Above a certain altitude, the decompression algorithm has to change in order to account for the effect of the change in atmospheric pressure. When diving in a mountain lake, find out what the altitude is and choose the altitude range in Nemo Wide within the four available options:

- **A0**: from sea level to approximately 700m/2300ft;
- **A1**: from approximately 700m/2300ft to approximately 1500m/4900ft ;
- **A2**: from approximately 1500m/4900ft to approximately 2400m/7900ft;
- **A3**: from approximately 2400m/7900ft to approximately 3700m/12100ft;
- We do not recommend diving at altitudes above 3700m / 12100ft. If you do, set Nemo Wide to **bottom timer** and find appropriate altitude dive tables.

On the pre-dive, post-dive, logbook and planner displays, A1 through A3 are indicated with the mountain symbol filled with 1, 2 or 3 segments while A0 is indicated by the absence of symbols.

⚠ WARNING

Diving in mountain lakes without first setting Nemo Wide to the proper altitude setting can cause severe injury or death.

2.2.1.4 WAtR (WATER)



You can set the computer for **FRESH** water or **SALt** water calibration, depending on where you intend to dive. Setting the wrong water type entails an error in depth measurement of approx 3% (i.e. at a depth of 30m/100ft, a computer set to salt water will show 29m/97ft in fresh water whereas a computer set to fresh water will show 31m/103ft in salt water). Note that this does not affect the proper functioning of the computer, since the computer performs all of the calculations based purely on pressure measurements.

2.2.1.5 UN:tS (UNITS)



You can choose between metric (depth in meters, temperature in °C) and imperial units. (depth in feet, temperature in °F).

2.2.1.6 FASt (FAST ASCENT)



A fast (uncontrolled) ascent is defined as one in which a speed of 12 m/min / 40ft/min or higher was maintained over more than two thirds of the way up. This applies to dives deeper than 12m/40ft only. In such an event, due to the potential of harmful bubble formation, Nemo Wide locks the computer for 24 hours in order to discourage you from diving again. In this menu, you have the option to disable the locking up of the computer in the event of an uncontrolled ascent.

⚠ WARNING

- An uncontrolled ascent increases your risk of decompression sickness (DCS)
- This feature is intended for very experienced divers only, such as dive instructors, who take full responsibility for the consequences of turning off this function.

2.2.1.7 ALRM (ALARMS)



In this menu you can disable audible alarms.

⚠ WARNING

Disabling audible alarms can lead you into potentially dangerous situation and could result in serious injury or death.

2.2.1.8 ErASE (ERASE DESATURATION)



Nemo Wide allows you to reset the desaturation in the computer. Any tissue saturation information from a recent dive will be reset to zero and the computer treats the next dive as a non-repetitive dive. This is useful when the computer is loaned to another diver who has not dived in the last 24 hours.

⚠ WARNING


Diving after having reset the desaturation is extremely dangerous and is very likely to cause serious injury or death. Do not reset the desaturation unless you have a valid reason to do so.

In order to prevent accidental desaturation reset, you must enter the security code once you decide to proceed with the reset. The security code is 1234.

After entering the security code you will get a confirmation of the successful completion of the operation.

2.2.2 SET TIME

This menu allows you to set the time and date. Press the **enter** button and **24h** or **ampm** will start to blink. Press the **+** or **-** button to switch between the two and/or press the **enter** button to confirm and move on to set the hour, the minutes and the date.

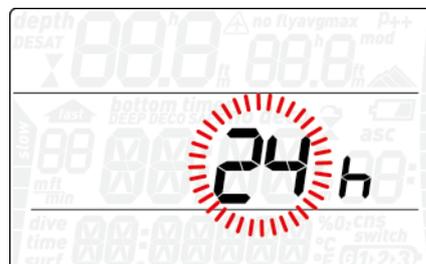



2.3 LOGBOOK



Nemo Wide can record the profiles of approximately 35 hours of diving, at a sampling rate of 5 seconds. The information can be transferred using the optional USB clip to PC via the Dive Organizer software or to a Mac via the Divers' Diary software. In addition, Nemo Wide can show most of the information directly on the display.

When you first enter the logbook menu, you will see a summary of all dives performed to date. In particular, the maximum depth ever reached, the total number of dives, the total number of hours spent underwater and the coldest water temperature recorded.




From here, press the **+** or **-** button to scroll through all dives in the memory of the computer. Press the **enter** button to view the details of a particular dive. Each dive has three pages of data. Each page has maximum and average depth at the top, and time dive started, max ascent rate and repetitive dive counter in the middle. The bottom row contains date of dive and O₂% on the first page, dive time and minimum water temperature on the second page, and surface interval to previous dive and CNS at end of dive on the third page.



Press the **+** or **-** button to scroll between the pages of information, press the **esc** button to return to the list of the main logbook menu.

2.4 DIVE PLANNER

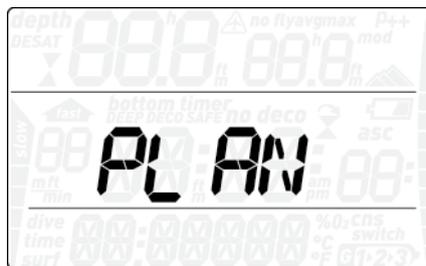


This function allows you to scroll through the no decompression limits, automatically taking into account the current residual saturation of the tissue compartments from a preceding dive. The times shown when scrolling the no decompression limits take into account the information entered under the set dive submenu: water type, altitude, personal safety factor, Air, or in the case of Nitrox, the values for the oxygen percentage and its maximum partial pressure. For each depth, the display shows the corresponding no deco time expressed in minutes. If Nitrox mode is selected, the maximum depth shown in the planner is limited by the MOD.

NOTE

The dive planner is enabled only if either air or nitrox mode is set

2.5 PC

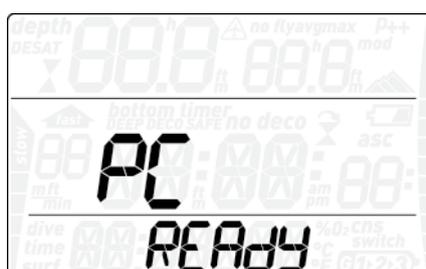

This submenu allows you to download your dive data to a PC or Mac. Press the **enter** button and the display will show **PC ready**, symbolizing that Nemo Wide is ready to communicate.

2.6 INFO



This submenu provides information about the hardware and software of your Nemo Wide and about the status of the battery with a number from 1 to 3, 3 being the highest, 2 corresponding to a steady battery symbol and 1 to the blinking battery symbol (no dive).

• 3 DIVING WITH NEMO WIDE

3.1 A FEW WORDS ABOUT NITROX

Nitrox is the term used to describe breathing gases made of oxygen-nitrogen mixes with an oxygen percentage higher than 21% (air). Because Nitrox contains less nitrogen than air, there is less nitrogen loading on the diver's body at the same depth as compared to breathing air.

However, the increase in oxygen concentration in Nitrox implies an increase in oxygen partial pressure in the breathing mix at the same depth. At higher than atmospheric partial pressures, oxygen can have toxic effects on the human body. These can be lumped into two categories:

- Sudden effects due to oxygen partial pressure over 1.4bar. These are not related to the length of the exposure to high partial pressure oxygen, and can vary in terms of the exact level of partial pressure they happen at. It is commonly accepted that partial pressures up to 1.4bar are tolerable, and several training agencies advocate maximum oxygen partial pressures up to 1.6bar.
- Long exposure effects to oxygen partial pressures over 0.5bar due to repeated and/or long dives. These can affect the central nervous system, cause damage to lungs or to other vital organs.

Nemo Wide keeps you safe with respect to these two effects in the following ways (as long

Nemo Wide Dive Computer

as it is set to either **air** or **nitrox**):

- Against sudden effects: Nemo Wide has an MOD alarm set for a user-defined ppO_2 max. As you enter the oxygen concentration for the dive, Nemo Wide shows you the corresponding MOD for the defined ppO_2 max. The default value of ppO_2 max from the factory is 1.4bar. This can be adjusted to your preference between 1.2 and 1.6bar. Please refer to section 2.1 for more information on how to change this setting. If Nemo Wide is set to air, the ppO_2 max is set to 1.4bar by default.
- Against long exposure effects: Nemo Wide "tracks" the exposure by means of the CNS% (Central Nervous System). At levels of 100% and higher there is risk of long exposure effects, and consequently Nemo Wide will activate an alarm when this level of CNS% is reached. Nemo Wide also warns you when the CNS level reaches 75%. Note that the CNS% is independent of the value of ppO_2 max set by the user.

3.2 ALARMS

Nemo Wide can alert you of potentially dangerous situations. There are five different alarms:

- Ascent rate alarm;
- Exceeding a safe ppO_2 /MOD;
- CNS =100%;
- Missed decompression stop;
- Low battery during the dive

⚠ WARNING

When in bottom timer mode, all warnings and all alarms are OFF aside for the low battery alarm.

NOTE

- Alarms are both visual and audible, as described in detail below.
- Ascent rate alarm has priority over other alarms if they are triggered simultaneously.


3.2.1 ASCENT RATE

As soon as depth decreases Nemo Wide activates the ascent rate control algorithm and displays the calculated value. This is shown to the very left in the middle row of the display.


⚠ WARNING

A rapid ascent increases the risk of decompression sickness.


If Nemo Wide determines an ascent rate of 10m/min / 30ft/min or higher, the fast ascent alarm is triggered: an audible alarm goes off, the  appears on the display and the speed value blinks. This persists until the ascent rate is reduced to 10m/min / 30ft/min or less.

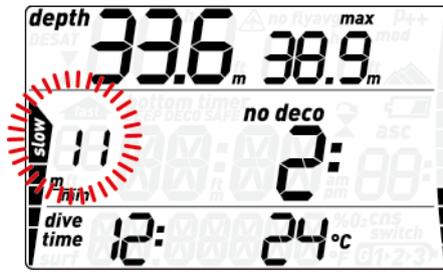

If the ascent rate exceeds 12m/min / 40ft/min at a depth below 12m / 40ft, the  blinks as well. If a speed in excess of 12m/min / 40ft/min is maintained for two thirds or more of the depth at which the alarm was first triggered, Nemo Wide considers it a dive violation and the display will show the steady  symbol.

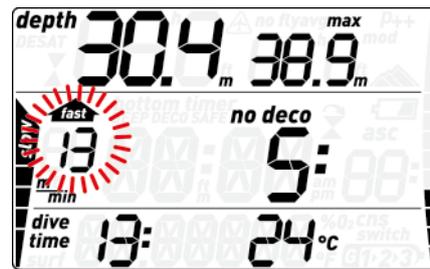

In this case, if the diver attempts a repetitive dive after surfacing, Nemo Wide will only function as a depth gauge and timer (bottom timer mode), and will display  on the screen throughout the dive.

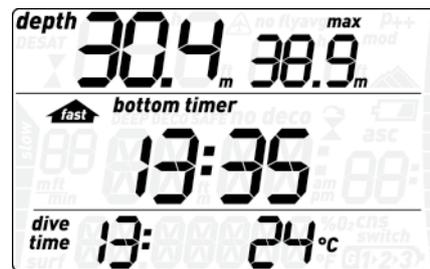


3.2.2 MOD/ ppO_2

⚠ WARNING

- The MOD should not be exceeded. Disregarding the alarm can lead to serious injury or death.
- Exceeding a ppO_2 of 1.6bar can lead to sudden convulsions resulting in serious injury or death.

When the diver reaches a depth at which the ppO_2 of the inspired gas exceeds the maximum limit entered in the corresponding setting (from 1.2 to 1.6bar), an audible alarm goes off, the current depth starts to blink and the value of the MOD is shown to the right of the current depth.

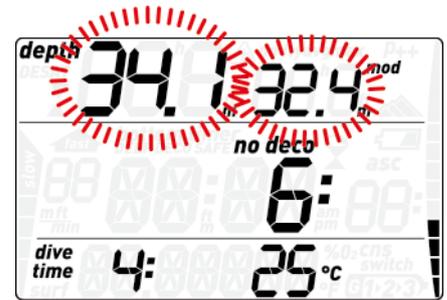

The alarm persists until the diver has ascended enough for the ppO_2 to return within the set limit.

⚠ WARNING

When the MOD alarm is triggered, ascend immediately until the alarm stops. Failure to do so could result in serious injury or death.

3.2.3 CNS = 100%

⚠ WARNING

When the CNS reaches 100% there is danger of oxygen toxicity. Start procedure to terminate the dive.

Oxygen toxicity exposure is tracked on Nemo Wide by means of the CNS% based on currently accepted recommendations for exposure limits. This toxicity is expressed as a percentage value which ranges from 0% to 100%. When the value reaches 75%, an alarm goes off and CNS value blinks on the screen. Additionally the CNS becomes the default item in the lower right corner: if you call up other information such as the temperature or the time of day, after 8 seconds the CNS appears again. Ascend to shallower depth to decrease oxygen loading and consider terminating the dive.



When the oxygen toxicity level approaches 100%. The alarm message and the audible signal are repeated for 5 seconds in one-minute intervals after the first occurrence and for as long as the value of CNS stays at or above 100%. Consider terminating the dive immediately!

⚠ WARNING


Diving with oxygen toxicity at levels of 75% or greater may put you into a potentially hazardous situation, which could result in serious injury or death.

3.2.4 MISSED DECOMPRESSION STOP

⚠ WARNING

Violating a mandatory decompression obligation may result in serious injury or death.

If you ascend above the decompression stop depth by more than 0.3m (1ft), a downward pointing triangle appears, an audible alarm goes off and both the current depth and the depth of the deco stop start blinking. This alarm remains active until you return to the correct depth.

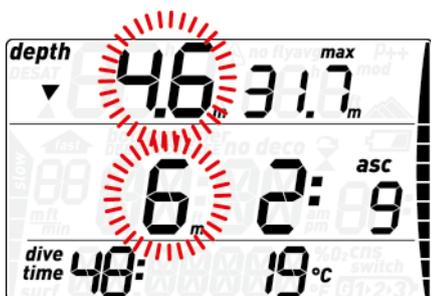


⚠ WARNING

- When the missed deco stop alarm is triggered, desaturation of the simulated tissue compartments is halted and resumes only when the diver returns to the correct stop depth.
- Never ascend above the displayed decompression stop depth.

3.2.4.1 MISSED DECO STOP MODE

If the stop depth is exceeded by more than 1m (3ft) for more than three minutes, Nemo Wide considers it a dive violation and the display will show ⚠.

In this case, if the diver attempts a repetitive dive after surfacing, Nemo Wide will function only as a depth gauge and timer (bottom timer mode), and it will display ⚠ on the screen.

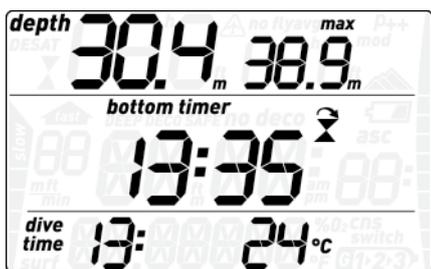

3.2.5 LOW BATTERY

If Nemo Wide detects that the battery power level is safe for diving but without much reserve left, it will show the steady battery symbol on the display. If the level of the battery decreases to the point of making it unsafe to dive, the battery symbol starts blinking. In such a situation, the backlight is disabled and audible alarms are muted.




⚠ WARNING

When the blinking battery symbol appears, you should stop the dive, safely, without delay.

3.3 DISPLAY INFORMATION

Upon immersion, if Nemo Wide was set to pre-dive, it will immediately start monitoring the dive. Otherwise, it will turn on automatically within 20 seconds of having reached a depth of 1.2m/4ft.

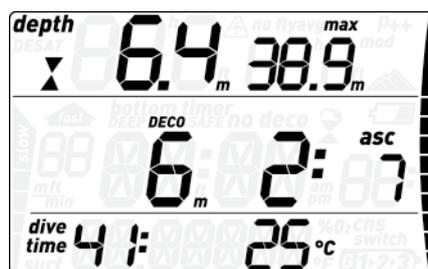

The following information is shown:

- current depth
- max depth
- no deco time (or depth and duration of deepest stop and total ascent time in case of decompression dives)
- dive time
- temperature
- nitrogen saturation bar graph

By pressing the ⊕ button, you can modify the information displayed in the upper row. At each button press, the screen cycles through max depth, MOD (nitrox only) and an empty field.

By pressing the ⊖ button, you can modify the information displayed in the bottom row. At each button press, the screen cycles through temperature, oxygen percentage, CNS and time of day (in lieu of the dive time; the latter has a 4-second time out after which the dive time is displayed again).

In case of an ascent, the **speed** in m/min or ft/min is displayed to the very left of the middle row of the display.


The **depth** is given in 10cm resolution until 99.9 meters, after which it is given in 1m resolution. When the depth is displayed in feet, the resolution is always 1 foot. At a depth shallower than 1.2m/4ft, the display shows ---. Maximum possible depth is 150m/492ft.


The **dive time** is displayed in minutes. If during the dive you ascend to the surface, the time spent on the surface will only be counted if you descend again below 1.2m/4ft within 3 minutes. This allows for brief periods of orientation. While on the surface, the time will not show as progressing but it is running in the background. As soon as you submerge, the time will resume, including the time spent on the surface.

The **no deco time** is calculated in real time and updated continuously. Maximum displayed no deco time is 99 minutes. If you remain at depth beyond a no deco time of zero minutes, you will enter into decompression: you can no longer make a direct ascent to the surface and Nemo Wide displays a **MANDATORY** decompression stop. Instead of a no deco time, it shows you the depth and duration of the deepest stop and the total ascent time (**ASC**), which includes each decompression stop and the time required to travel the vertical distance to the surface at a rate of 10m/min / 33ft/min. **ASC** includes the duration of deep stops as well.

DEEP, DECO and SAFETY stops:

- A **SAFETY** stop is generated as soon as the depth of the dive exceeds 10m / 33ft. It has a duration of 3 minutes and it is carried out between depths of 6m / 20ft and 3m / 10ft at the end of a dive prior to surfacing. Such stop is **NOT** mandatory but **HIGHLY RECOMMENDED**.
- **DECO** stops are generated progressively as you stay down beyond the no deco time. **DECO** stops are **MANDATORY**.
- **DEEP** stops are generated as you approach the no deco limit. You can either have one 2-minute stop or two 1-minute stops. **DEEP** stops are **NOT** mandatory. Deep stops are indicated to the left of the no deco time or as first (deepest) stop of a deco dive.


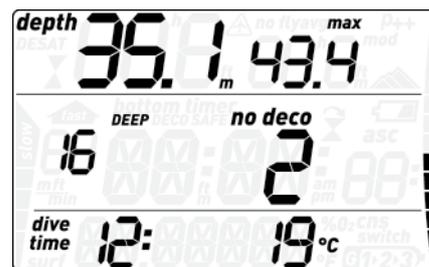


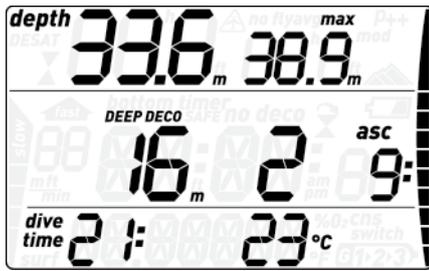

WARNING

During all dives, perform a safety stop between 3 and 6 meters/10 and 20 feet for 3 minutes, even if no decompression stop is required.

Upon reaching the optimum range for carrying out a deep stop (+/- 1m/3ft of the displayed depth) or safety stop (between 6m/20ft and 3m/10ft), a countdown timer appears to indicate the progress of the stop.

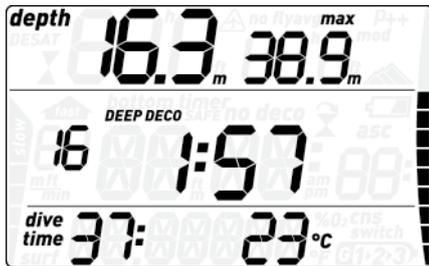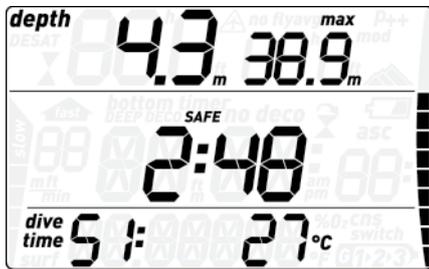

For DECO stops, since the duration is a function of the exact depth, only the minutes are shown.

During a decompression stop, the following symbols may appear:


- ▼ : optimal range for the decompression stop;
- ▲ : above decompression stop depth, descend immediately!

The **nitrogen bar graph** is on the right side of the display. It represents nitrogen saturation in the leading tissue compartment. The bar graph is made of ten segments, which gradually fill during the dive. The more black segments you see, the closer to the no deco limits you are. As you enter a situation of mandatory decompression stop, all segments will be black.

During a surface interval, the segments will gradually turn off as Nemo Wide tracks the offgassing of your tissues.

Ascent/descent rate: in presence of a depth change in excess of 80cm / 3ft, Nemo Wide calculates the corresponding ascent or descent speed and displays it at the very left of the middle row of the display, for the duration of the ascent or descent.

3.4 AFTER THE DIVE

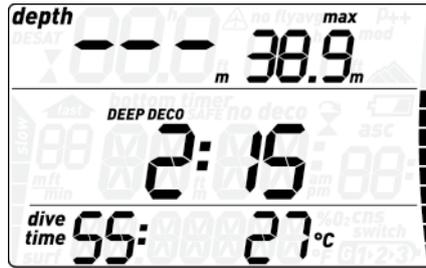

Upon returning to the surface, Nemo Wide first goes into the so-called surfacing mode. This mode allows you to resume your dive after a brief period of orientation. The screen shows a 3-minute countdown.

If you submerge again before the 3-minute countdown is over, the dive time will resume from where it left off, including the time spent on the surface. If you do not submerge before the end of the countdown, Nemo Wide considers the dive finished, records the data to the logbook and reverts to the so-called post-dive mode.



The post-dive screen shows the following information:

- The remaining desaturation time (DESAT): this is calculated by the decompression model in the computer. Any dive started while there is remaining desaturation on your computer is considered a repetitive dive, meaning that Nemo Wide accounts for the pre-existing nitrogen load in your body.
- The no-fly time (▲): this is the time during which an exposure to the reduced pressure inside the cabin of an airplane could cause decompression sickness. Nemo Wide employs, as recommended by NOAA, DAN and other agencies, a standard 12-hour (no-deco non-repetitive dives) or 24-hour (deco and/or repetitive dives) countdown. Hence you may find a situation in which the desaturation time is shorter than the no-fly time. This is simply the consequence of the desaturation time being calculated by the algorithm based on the actual dive profile, while the no-fly time is an accepted standard in the diving industry. Since the real effect of flying after diving has never been fully investigated, this approach fits with our philosophy.

WARNING

Flying while Nemo Wide displays ▲ can result in serious injury or death.

- The surface interval (surf): this is displayed from the moment the dive is closed (3 minutes after surfacing) for as long as there is remaining desaturation or no-fly time on the computer.

- In case of a dive violation, the corresponding symbol (▲, ▼) is shown.

In addition, the bar graph shows the calculated nitrogen load in the leading tissue. You can use this to gauge your progress in getting rid of nitrogen as the surface interval grows. Nemo Wide continues to perform decompression-related calculations (nitrogen release), for as long as there is desaturation time left.

3.5 DIVING WITH MORE THAN ONE GAS MIXTURE

WARNING

- Diving with more than one gas mixture represents a much higher risk than diving with a single gas mixture, and mistakes by the diver may lead to serious injury or death.
- During dives with more than one gas mixture, always make sure you are breathing from the tank that you intend to breathe from. Breathing from a high oxygen concentration mix at the wrong depth can kill you instantly.
- Mark all your regulators and tanks so that you cannot confuse them under any circumstance.
- Before each dive and after changing a tank, ensure that each gas mixture is set to the correct value for the corresponding tank.

Nemo Wide enables you to use up to three gas mixtures during the dive (air and Nitrox only). The three mixtures are labeled G1, G2 and G3 and must be in ascending order of oxygen content, i.e. G1 has the lowest oxygen concentration, G2 an intermediate value, and G3 has the highest oxygen concentration of the three. If you are diving with only two mixtures, you will be utilizing tanks G1 and G2.

WARNING

It is not possible to switch to a gas at a depth at which the oxygen partial pressure for that gas is greater than the set maximum value.

NOTE

- If you dive using just one gas, select G1 and deselect the other two.
- For dives with two gases, select G1 and G2 and deselect the third.
- When enabling G2 and G3, you must first define G2 and then G3.
- You cannot activate G3 without first having activated G2.
- G2 cannot have an oxygen percentage higher than G3.
- If you set G2 to OFF, G3 will automatically be set to OFF also.
- The MOD for G2 and G3 is the switch depth for the corresponding gas. This is what Nemo Wide uses for its calculation, alarms and suggested switch points.

3.5.1 SETTING MORE THAN ONE GAS

The characteristics of the gases must be entered in the computer before the dive. It will then be your responsibility to tell Nemo Wide

which gas is currently being used during the various phases of the dive.

To use multiple gases, you will need to enable the gases and set the oxygen percentage and the ppO₂max for each one. This is done in the same way as for G1, with the difference that for G2 and G3 you can turn a gas **ON** or **OFF**. Keep in mind that the MOD for G2 and G3 is the depth at which Nemo Wide will prompt you to perform the gas switch (see section 3.5.2 below). To enable G2 press the **+** button from the **G2 OFF** display. You will now see **G2 ON**, a value of oxygen concentration, ppO₂ and MOD. Proceed as you would for G1 until you get to the **G3 OFF** screen. Either press **esc** if you have finished setting gases, or press the **+** button to advance to the **G3 ON** display and setting of G3.



3.5.2 SWITCHING GAS

Nemo Wide always begins the dive with G1, which has the lowest percentage of oxygen. When during the ascent you reach the depth corresponding to the MOD of G2, Nemo Wide sounds an audible signal and the oxygen concentration of G1 together with the word **switch** start to blink in the lower right corner.



Press the **+** button while this indication is blinking to initiate the gas switch: the oxygen percentage of G2 starts to blink in lieu of that of G1, and in the top right corner the MOD of G2 is displayed, also blinking.



Press or press and hold the **enter** button to confirm the switch to G2: the set oxygen concentration will be displayed steadily in the lower right corner of the screen, and within 20 seconds the ascent time is updated to reflect the higher oxygen concentration in the breathing gas.



If you press the **+** button while G2 is blinking, the next available gas in the list will be displayed instead. This will be G1 if only two gases are set or if you are deeper than the MOD of G3, or G3 if you have set three gases and are shallower than the MOD of G3. Alternatively you can press **esc** to cancel the gas switch and stick with G1.

NOTE

- Nemo Wide will allow the change only if the depth is shallower than the MOD corresponding to the set ppO₂max.
- Nemo Wide will not allow the gas switch if you are deeper.
- The automatic blinking of the oxygen concentration of G1 lasts only for 20 seconds. You can however initiate the gas switch at any time by pressing the **enter** button when the oxygen concentration is displayed in the lower right corner, then switch to G2 as long as your depth allows the gas to be activated.
- The same process is repeated when you approach the MOD for G3 with G2 blinking instead of G1
- If you have set G1, G2 and G3 and have not switched from G1 to G2, once you reach the MOD for G3 the oxygen concentration of G1 will again blink to alert you of the possibility of switching gas.

3.5.3 SPECIAL SITUATIONS

3.5.3.1 SWITCHING BACK TO A GAS MIXTURE WITH LOWER OXYGEN CONCENTRATION

There may be situations in which you have to switch back to a gas with lower oxygen concentration than what you are currently breathing. This can happen for instance if you want to descend deeper than the MOD for the current gas, or if for instance you have run out of gas in G2 during the decompression. To do so, simply press the **-** button until the oxygen concentration is displayed in the lower right corner, then press or press and hold the **enter** button to initiate the gas switch. From here on the procedure is the same as described in 3.5.2.

3.5.3.2 SUBMERGING BELOW THE MOD AFTER A GAS SWITCH

If after having switched to a gas mixture with a higher oxygen concentration you inadvertently drop again below the MOD for that mixture, the MOD alarm will immediately go off. Either switch back to a gas mixture suited for that depth, or ascend above the MOD for the gas mixture you are breathing from.

3.6 BOTTOM TIMER MODE

When Nemo Wide is set to **bottom timer** mode, it will only monitor depth, time and temperature, and will not carry out any decompression calculation. Maximum displayed dive time in gauge mode is 999 minutes. You can only switch to bottom timer mode if the computer is completely desaturated. All audible and visual alarms, other than the low battery alarm, are turned off.

WARNING

Dives in bottom timer mode are performed at your own risk. After a dive in bottom timer mode you must wait at least 24 hours before diving using a decompression computer.

During a dive in bottom timer mode, the following information is displayed:




- current depth
- max depth
- stopwatch
- dive time
- temperature
- in case of an ascent: ascent speed (in m/min or ft/min).


Press the **+** button to toggle between max depth, average depth and an empty field. Press the **-** button to bring up the time of day in lieu of the dive time (the display reverts back to dive time after 4 seconds).

Nemo Wide Dive Computer

While the average depth is displayed, pressing and holding the **enter** button resets the average depth.

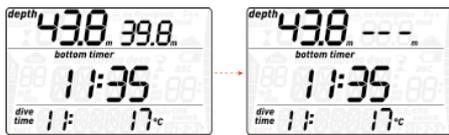

From any display, pressing the **enter** button restarts the stopwatch.

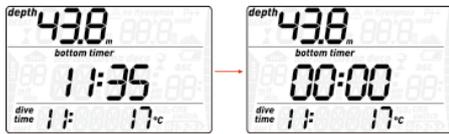

3.6.1 DIVE VIOLATION INDUCED BOTTOM TIMER MODE

The following violations can occur during an Air or Nitrox dive:

- Uncontrolled ascent.
- Missed deco stop.

In case of a violation, Nemo Wide will restrict the use of Air and Nitrox mode for 24 hours, and will only allow operation in bottom timer mode.

• 4 TAKING CARE OF NEMO WIDE

4.1 TECHNICAL INFORMATION

Operating altitude:

- with decompression – sea level to approximately 3700m/12100ft
- without decompression (gauge mode) – at any altitude

Decompression model: RGBM Mares-Wienke (10 tissues)

Depth measurement:

- Max displayed depth: 150m/492ft
- Resolution: 0.1m until 99.9m and 1m at depth deeper than 100m. Resolution in ft is always 1ft
- Temperature compensation of the measurement between -10 °C to +50 °C / 14 °F to 122 °F
- Accuracy from 0 to 80m/262ft: 1% ±0.2m/1ft

Temperature measurement:

- Measurement range: -10 °C to +50 °C / 14 °F to 122 °F
- Resolution: 1 °C / 1 °F
- Accuracy: ± 2 °C / ± 4 °F

Clock: quartz clock, time, date, dive time display up to 99 minutes (999 minutes in bottom timer mode)

Oxygen concentration: adjustable between 21% and 99%, ppO₂ max range between 1.2 and 1.6bar

Logbook memory: 35 hours of dive profile at 5-second sampling rate

Operating temperature: -10 °C to +50 °C / 14 °F to 122 °F

Storage temperature: -20 to 70 °C / -4 to 158 °F

Display:

- Diagonal: 38 mm / 1 1/2"
- Mineral glass

Power supply:

- CR2450 user-replaceable battery
- battery life: 300-500 dives. Actual battery duration depends on the usage of the backlight and the water temperature.

4.2 MAINTENANCE

The depth accuracy should be verified by an authorized Mares dealer every two years. Aside from that, Nemo Wide is virtually maintenance free. All you need to do is rinse it carefully with fresh water after each dive (avoid any chemical products) and replace the battery when needed. To avoid possible problems with your Nemo Wide, the following recommendations will help assure years of trouble free service:

- avoid dropping or jarring your Nemo Wide;
- do not expose Nemo Wide to intense, direct sunlight;
- do not store Nemo Wide in a sealed container, always ensure free ventilation.

NOTE

If you notice signs of moisture on the inner wall of the mineral glass, take your Nemo Wide immediately to an authorized Mares service center.

⚠ WARNING

The mineral glass is not exempt from scratches resulting from improper use.

⚠ WARNING

Do not blow compressed air onto Nemo Wide, because it could damage the pressure sensor area.

4.2.1 REPLACING THE BATTERY IN NEMO WIDE

Replacing the battery is a delicate operation, and requires close attention. We suggest that you visit an authorized Mares center. Mares declines all responsibility for any damage caused by replacing the battery.


NOTE

Do not discard the old battery in the environment. Mares adopts a policy of respect for the environment, and urges use of the appropriate separated waste collection service.

⚠ WARNING

Inspect the O-ring carefully, checking for any signs of damage, tearing or warping. If necessary, replace it with a new O-ring (Mares spare part Cod. 44200983).

Unscrew the cover of the battery vane by using a coin that best fits into the slot. Remove the cover, remove the battery and insert the new battery paying close attention to the polarity. Check the o-ring and if needed replace it. Put the cover back in place and turn clockwise while pressing down until the marks on the cover and case are aligned.

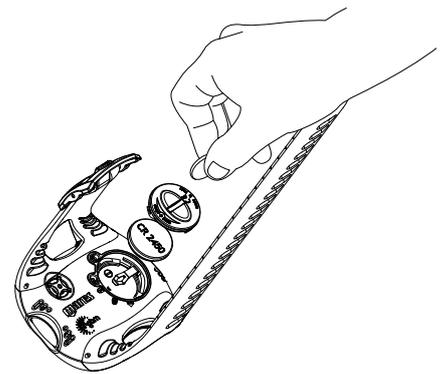

NOTE

The battery compartment is sealed from the electronics, so that in case of a flooding of the battery compartment the dive computer is unharmed. In such event, you will need to rinse the compartment with fresh water, dry it thoroughly, replace the o-ring and put in a new battery.

⚠ WARNING

Mares reserves the right to refuse to provide service under the warranty if the maintenance instructions are not followed.

4.3 WARRANTY

Mares products are guaranteed for a period of two years subject to the following limitations and conditions:

The warranty is non-transferable and applies strictly to the original purchaser.

Mares products are warranted free from defects in materials and workmanship: components that, upon technical inspection, are found to be defective, will be replaced free of charge.

Mares S.p.A. declines all responsibility for accidents of any kind that result from tampering or incorrect use of its products.

Any products returned for overhaul or repairs under warranty, or for any other reason, must be forwarded exclusively via the vendor and accompanied with a proof of purchase slip. Products travel at the risk of the sender.

4.4 WARRANTY EXCLUSIONS

Damage caused by water seepage resulting from improper use (e.g. dirty seal, battery compartment closed incorrectly, etc.).

Rupture or scratching of the case, glass or strap as a result of violent impact or blows.

Damage resulting from excessive exposure to elevated or low temperatures.

Damage caused by the use of compressed air to clean the dive computer.

4.5 HOW TO FIND THE PRODUCT SERIAL NUMBER

To see the product serial number, enter the INFO submenu.

• 5 DISPOSAL OF THE DEVICE



Dispose of this device as electronic waste. Do not throw it away with regular rubbish.

If you prefer, you can return the device to your local Mares dealer.



Algorithm

